 


Cheerble

USER MANUAL

Pet Fountain Elfin D1 Pro

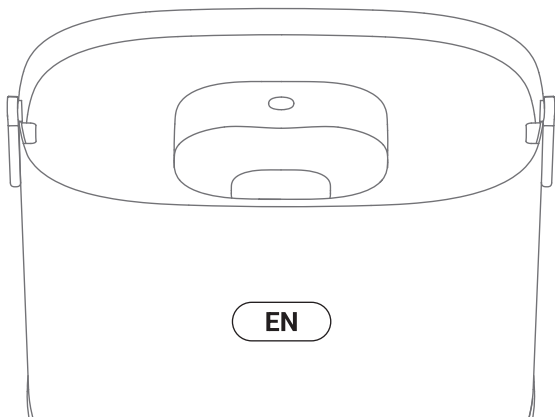

EN

BEFORE USE

Thank you for choosing Cheerble Pet Fountain Elfin D1 Pro.

To ensure safety and proper use, please read the user manual and accompanying materials carefully before installing or using the product. The company is not liable for any personal injury, property damage, or other losses caused by improper use.


CAUTIONS

1. The product can be operated by children aged 8 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning the safe use of the product and understand the hazards involved.
2. Children under 8 should not operate the product.
3. Children should be supervised to prevent them from playing with the product.
4. Product cleaning and maintenance should not be done by children without supervision.
5. The product contains a non-replaceable battery.
6. Keep the small product parts and packaging materials properly to avoid being chewed or swallowed by pets.
7. Check the product for damage before each use and do not use it if damaged to avoid injury. If any abnormalities occur during use, stop using the product immediately.
8. Use the product on a level, stable, and open surface. Do not tilt or tip over it.
9. Keep the base dry and away from water.
10. Do not use the product in damp or excessively hot and stuffy environments to avoid safety hazards.
11. Use the included USB Type-C cable and power adapter to power or charge the product.




CAUTIONS

12. To avoid scalding the pets or damaging the product, do not add water above 104°F (40°C) to the water tank.
13. The product is not dishwasher-safe, except for its stainless steel water tray.
14. If the product is not in use for a long time, disconnect it from the power source.
15. Slot and store the USB Type-C cable properly during use to avoid being chewed by pets.
16. Keep this user manual for future reference. A digital copy is available at www.cheerble.com if needed.

PRODUCT OVERVIEW

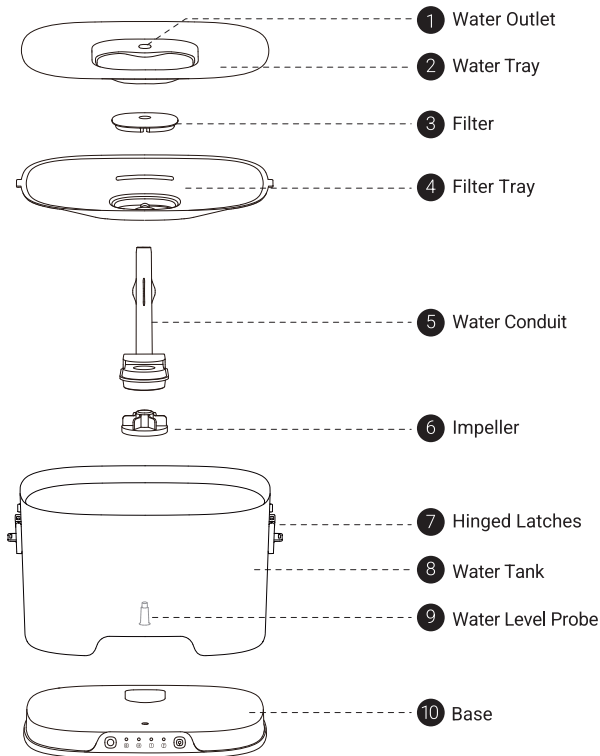


PRODUCT OVERVIEW

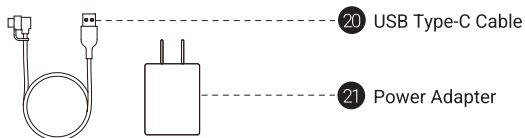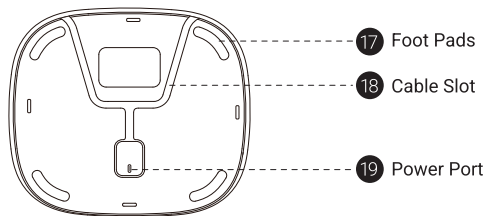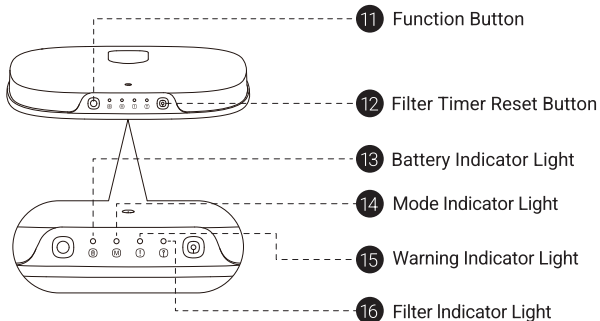


INSTALLATION INSTRUCTIONS

1. Soak the filter in clean water and rinse.

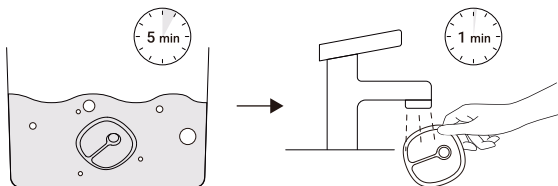


2. Install the impeller and water conduit.

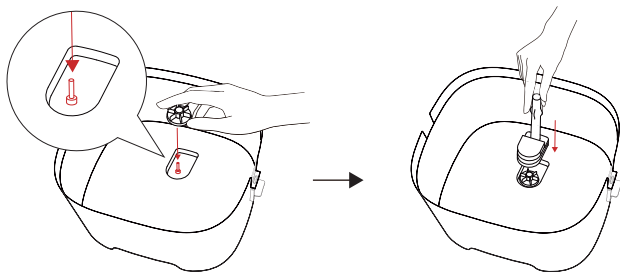


INSTALLATION INSTRUCTIONS

3. Add water ($\leq 104^{\circ}\text{F}$ / $\leq 40^{\circ}\text{C}$).

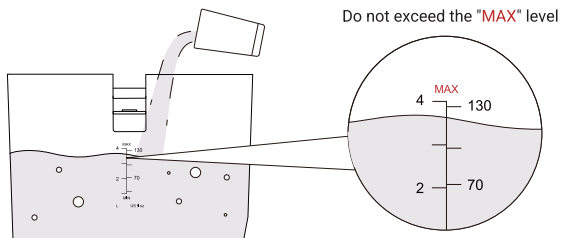

4. Install the filter tray, filter, and water tray, then secure them with the hinged latches.

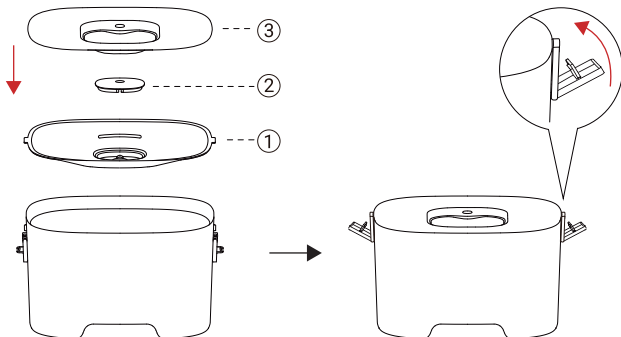


INSTALLATION INSTRUCTIONS

5. Choose a power supply method.

The product supports 2 power supply methods:

(1) Plug-in Power: When the built-in battery is low, connect the product to a power source using the included USB Type-C cable and power adapter. This will power the product while charging the battery.

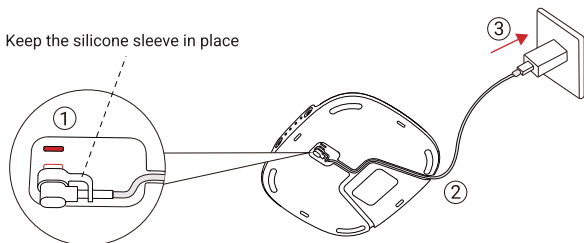

(2) Built-in Battery Power: When the built-in battery is sufficiently charged, the product can operate without plug-in power.




1. Always keep the power port clean and dry.

2. When using plug-in power, connect the product to a power source before attaching the water tank to the base.


INSTALLATION INSTRUCTIONS

6. Attach the water tank to the base and position the product properly.

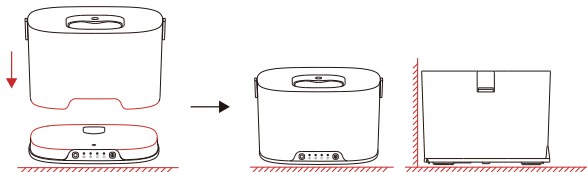

OPERATING INSTRUCTIONS

Power on the product and switch modes.

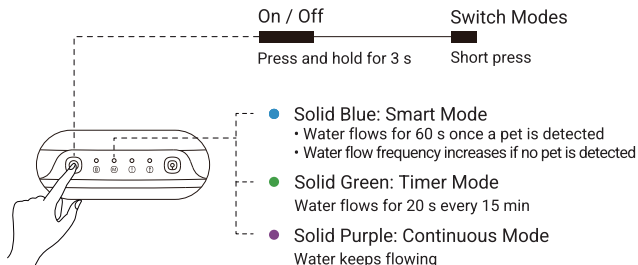

1. For steady water flow, continuous mode is available only when the product is plugged in.
2. If the battery and mode indicator lights turn off during operation, press the function button to check the current status, and press again to switch to the next mode.

INDICATOR LIGHTS

Battery Indicator Light



The battery indicator light stays on when the product is plugged in and during water dispensing, and is off when on battery power. Short press the function button to check the current status.

Mode Indicator Light



To save energy, the mode indicator light turns on only during water dispensing and turns off automatically. Short press the function button to check the current mode.


Warning Indicator Light



Check if the product is installed correctly as instructed and ensure the water level in the water tank is above the "MIN" mark.

INDICATOR LIGHTS

Filter Indicator Light

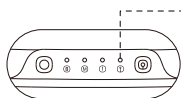


● Solid Orange: Filter Replacement Reminder
(replace the filter every 2 to 3 weeks)

⚡ Flashing Orange: Filter Life Timer Reset Complete

Reset the Filter Life Timer:

After filter replacement, reset the filter life timer when the product is on.

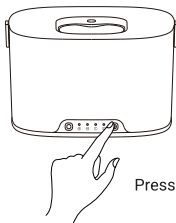

Press and hold for 5 s




Filter lifespan depends on actual usage and local water quality, which may impact the recommended replacement frequency.

CARE & MAINTENANCE

1. Unplug the product before disassembly or cleaning.
2. To avoid damage to product components, do not wash them with water above 158°F (70°C) or with abrasive cleaners.
3. Do not wash the base. Gently wipe it clean with a soft, slightly damp sponge.
4. Regularly rinse the washable components, excluding the base.
5. If unusual noise or water leaks occur, the filter may be clogged.
 - (1) Detach the filter and rinse.
 - (2) Clean any debris from the filter tray.
 - (3) Reassemble the components and test the product.
 - (4) If the issue persists, replace the filter.

SPECIFICATIONS

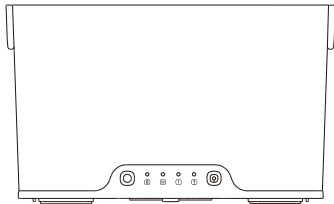

Model:	CDY04
--------	-------

Main Materials:	ABS, Stainless Steel
-----------------	----------------------

Weight:	3.9 lb / 1.8 kg
---------	-----------------

Dimensions:	12 × 10 × 7 in / 304 × 262 × 183 mm
-------------	-------------------------------------

Capacity:	135 fl oz / 4 L
-----------	-----------------

Battery:	5000 mAh
----------	----------

Input:	5V=1A
--------	-------

Operating Temperature:	41°F to 104°F / 5°C to 40°C
------------------------	-----------------------------

LIABILITY TERMS

Warranty

One-Year Limited Warranty

Cheerble warrants the included hardware product and accessories against defects in materials and workmanship for one year from the date of original retail purchase. Cheerble does not warrant against normal wear and tear nor damage caused by accident or abuse. Complete details of the warranty applicable to this product and its terms can be found at www.cheerble.com.

Terms of Use and Limitation of Liability

1. Terms of Use

The use of this product is subject to your acceptance without modification of terms, conditions and notices contained with this product. Use of this product implies acceptance of all such terms, conditions, and notices. If you do not wish to accept these terms, conditions, and notices, please return the product, unused, in its original packaging and at your own cost and risk with proof of purchase for refund.

2. Proper Use

Proper use includes, without limitation, reviewing the entire user manual and any specific safety information statements. The specific temperament or size/weight of your pet may not be suitable for this product. If you are unsure whether this product is appropriate for your pet, please consult your veterinarian to use.

3. No Unlawful or Prohibited Use

This product is not intended to harm, injure or provoke. Using this product in a way that is not intended could result in violation of local laws.

LIABILITY TERMS

4. Limitation of Liability

In no event shall Shenzhen Cheerble Technology Co., Ltd. or any of its associated companies be liable for (i) any direct, indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the use or misuse of this product.

5. Modification of Terms and Conditions

Shenzhen Cheerble Technology Co., Ltd. reserves the right to change the terms, conditions and notices governing this product from time to time. If such changes have been notified to you prior to your use of this product, they shall be binding on you as if incorporated herein.

FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer, or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by Shenzhen Cheerble Technology Co., Ltd. could void the user's authority to operate the equipment.

Cheerble

Manufacturer: Shenzhen Cheerble Technology Co., Ltd.
Address: 2801, West Tower, Lepu Building, 66 Xingke Road, Xili
Subdistrict, Nanshan District, Shenzhen, China



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !